

Crown Clip Instructions

STARTER CLIP



Line up the back (vertical leg) of the Starter Clip in position for the first deck board. Fasten this clip to the joist with the screws supplied. Slide deck board groove into Starter Clip tab.



CROWN CLIP



Slide the Crown Clip into the deck board groove and fasten to the joist using the screws supplied. Repeat this step until the last deck board is slid into the Crown Clip.



Once the last deck board has been trimmed to fit, either flush with the outside edge of the rim joist or with an overhang. The Finish Clip can be installed one of 2 ways.

FINISHING CLIP



- a. Deck boards that are flush to the outside edge of the rim joist. Remove the deck board and install the leg (with one hole) of the Finish Clip to the underside of the board, aligning the deck board edge with the inside of the Finish Clip leg with 2 holes. (This will ensure a tight fit into the tab of the Crown Clip).



- b. Deck boards that overhang the rim joist. Leave the last board in place and fasten the Finish Clip (leg with 1 hole) into the underside of the deck board, leaving the clip slightly away from the rim joist so when the leg with 2 holes is fastened to the rim joist it pulls the deck board tight into the Crown Clip.

